

How To Make Labels and Tags




Design your own unique labels and tags in the mySewnet crafting app. Use the Print and Cut feature and cut them on your SINGER® MOMENTO™ Craft Cutting Machine. Put a personal touch on gifts, organize your home with style, or give your handmade projects a professional finish. With images, shapes and text, let your creativity run wild by creating something that truly stands out!

What you need



- Printable Cardstock Paper
- Printable Sticker Paper
- Light Grip Mat 12" x 12"
- Basic Blade
- Printer

Direction


1. From the start page, Create a New Canvas and select 'Custom Size'. From the dropdown menu, select the size of the paper you are going to use (Letter Portrait/A4 Portrait).

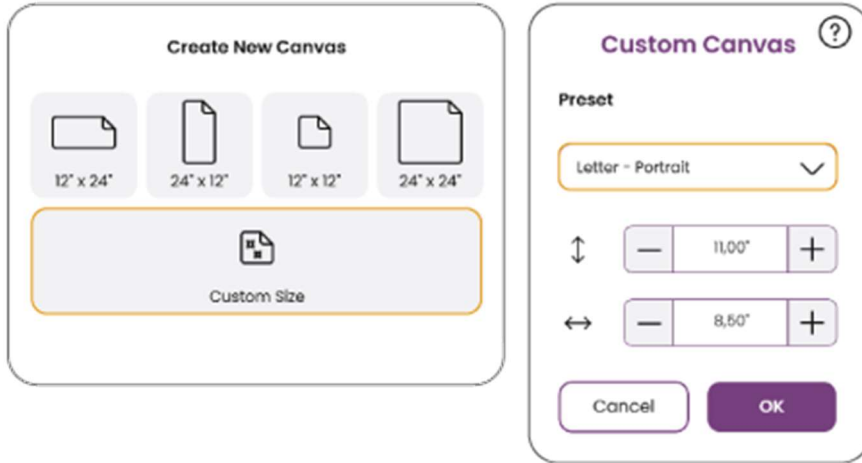



2. Click 'Insert from Library'. In the Shapes or Organization category there are a variety of label and tag shapes to choose from. Select the one you like and click 'Open In Canvas'.

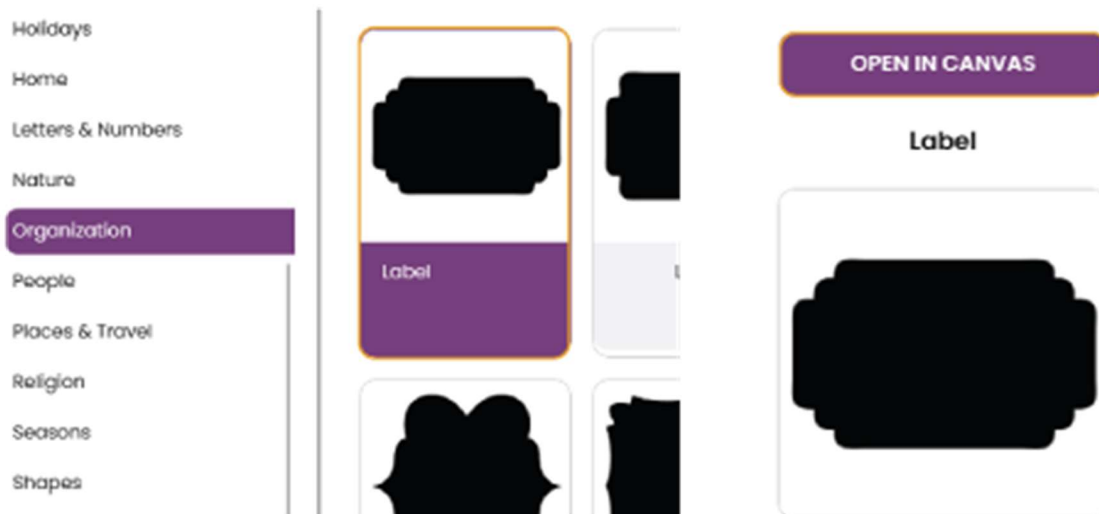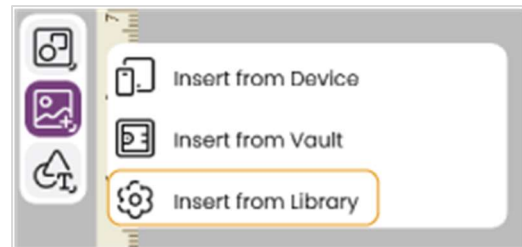


3. Select 'Insert from Library' again. Select an Arts & Crafts design that suits your project and 'Open In Canvas'. Repeat to add as many designs as you like.

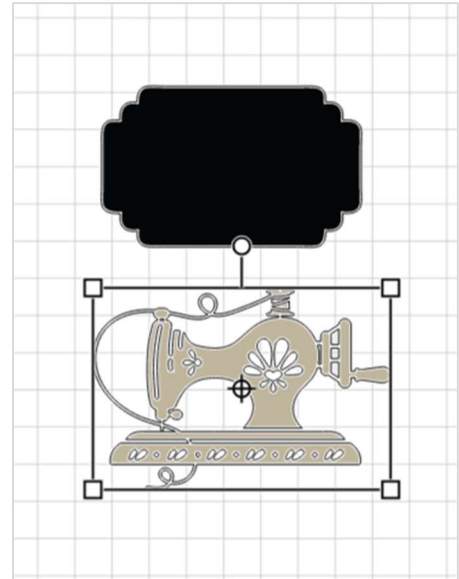

 4. In the Edit menu, you can change colors and adjust the size and rotate or flip the designs.

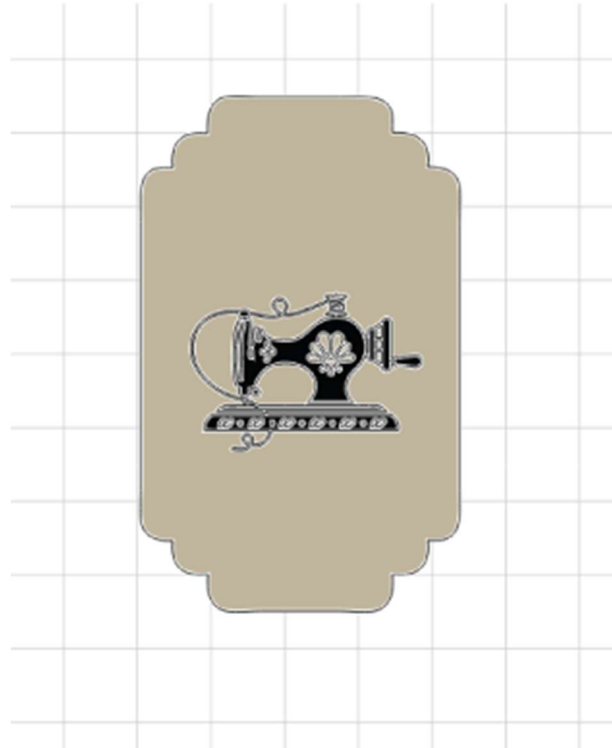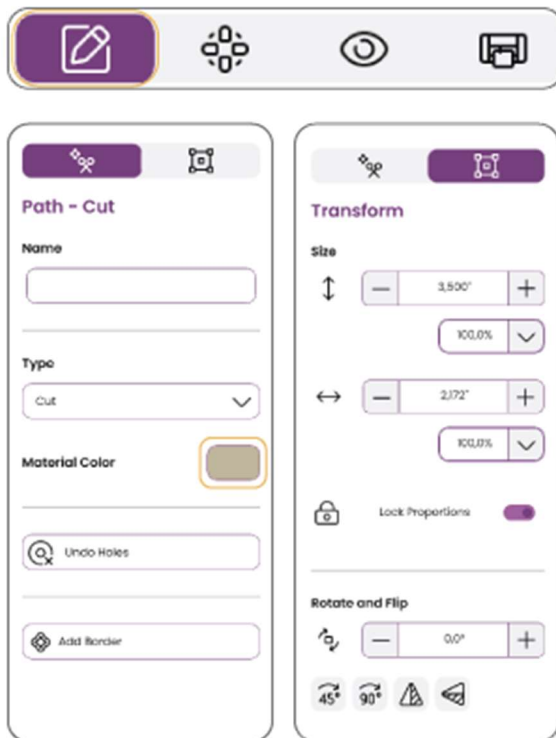


 5. Select 'Add' then 'Lettering'. Type in your text. Select a font and adjust the size.

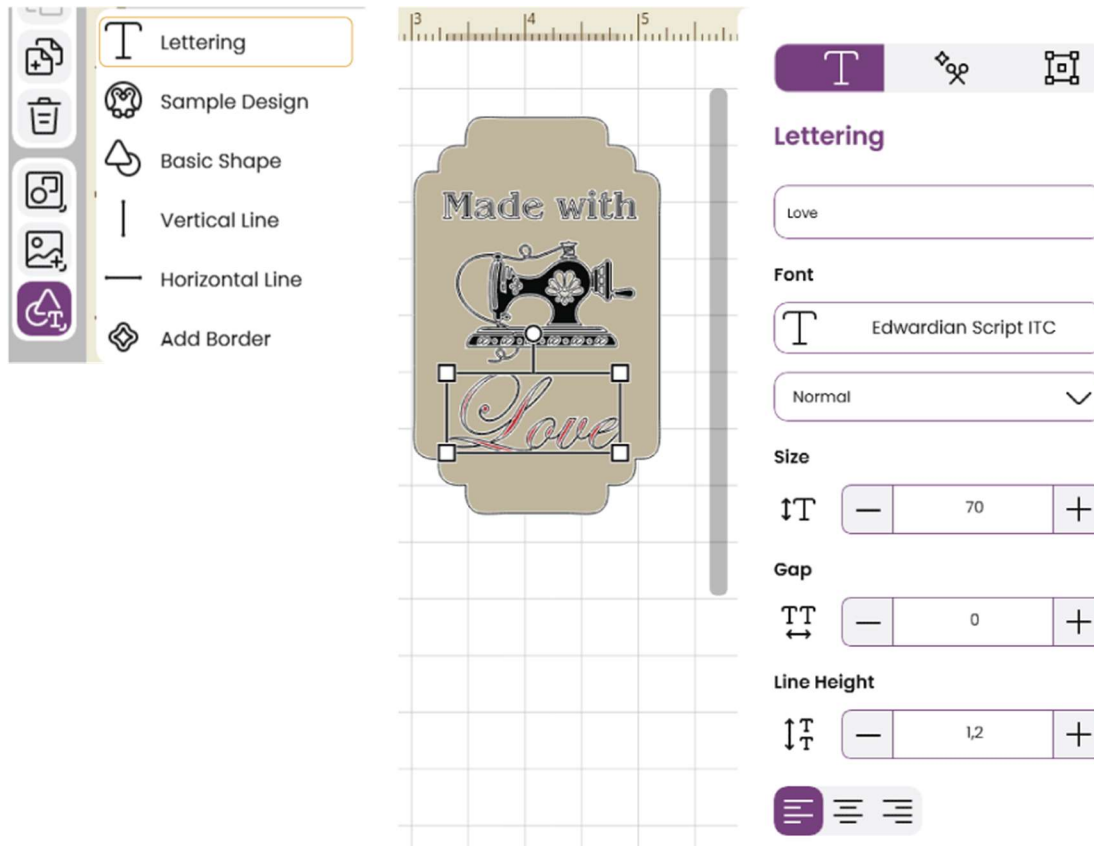


6. Select All then change the operation type to Print. If you want the color of your paper material to be the background instead of printing it, the shape of the label should be left as a cut path, and you can skip step #7.


Align the shapes and make final adjustments to your design.

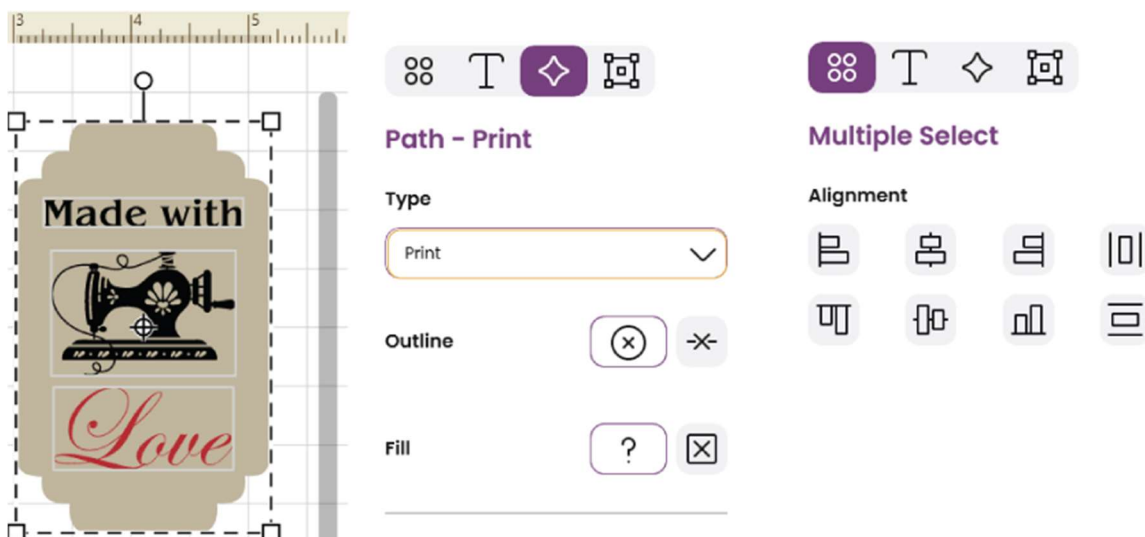

 
7. Select only the label shape then click 'Add Border', this will create a cut line around your shape. If you do not want a white border around your label, set the Margin to 0. If you are making a label with a hole, make sure the 'Holes' box is checked.

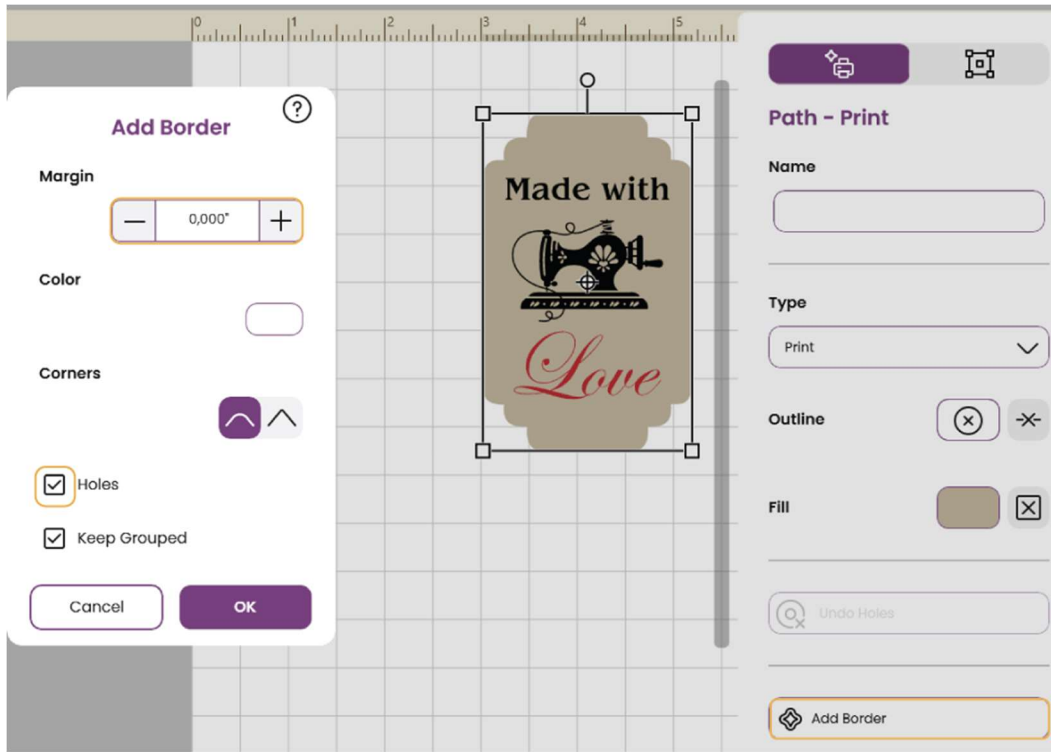


8. Select All then click 'Attach'.

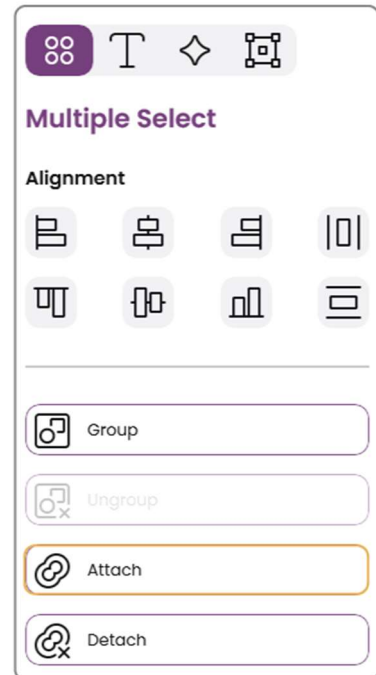


- With your design selected, click 'Multiply' and select 'Fill Canvas' and click 'Apply'. The program automatically fills the canvas with as many shapes that will fit inside the margins of the printable area of your paper size.

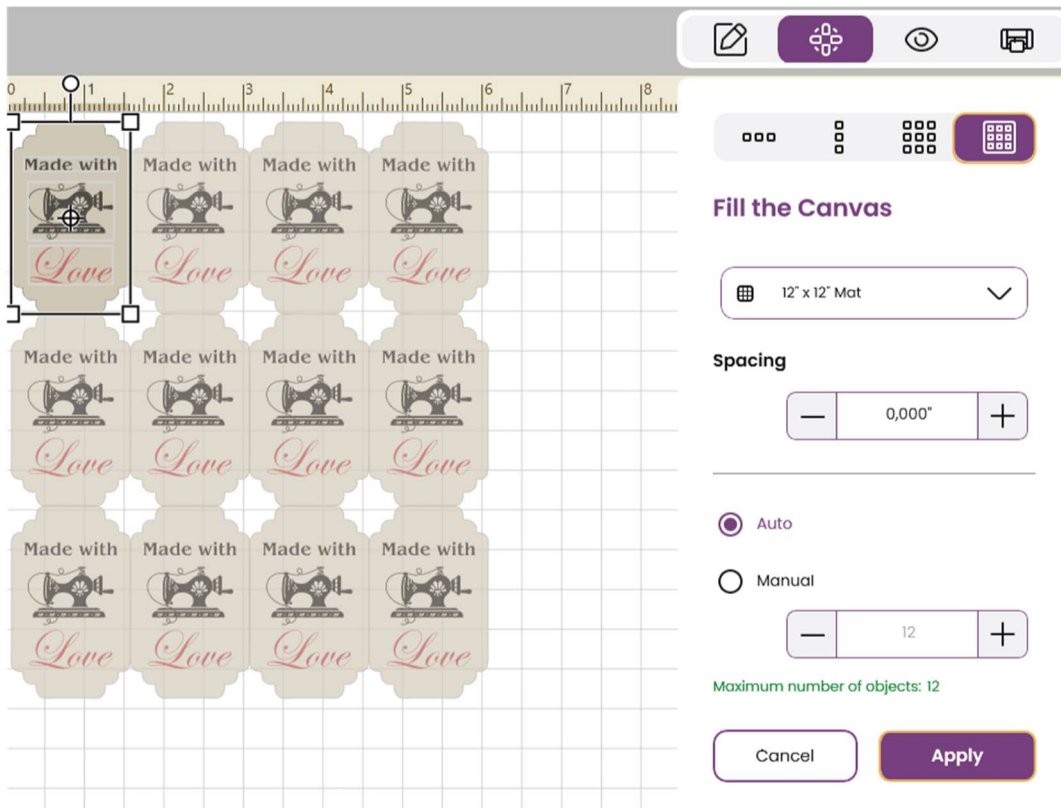

- Go to the Output menu and 'Send to Machine'. Select Mat Size 12" x 12" and your material (Printable Sticker Paper or Cardstock).

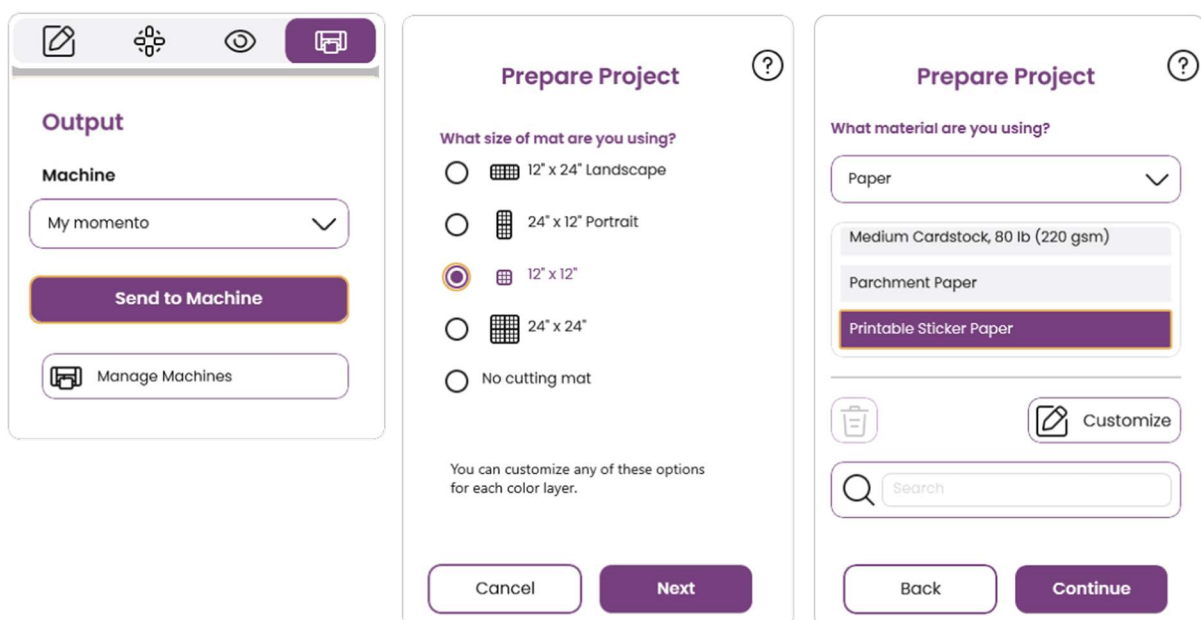

11. Make sure the Material Size is the same as the paper in your printer. Click 'Print'.

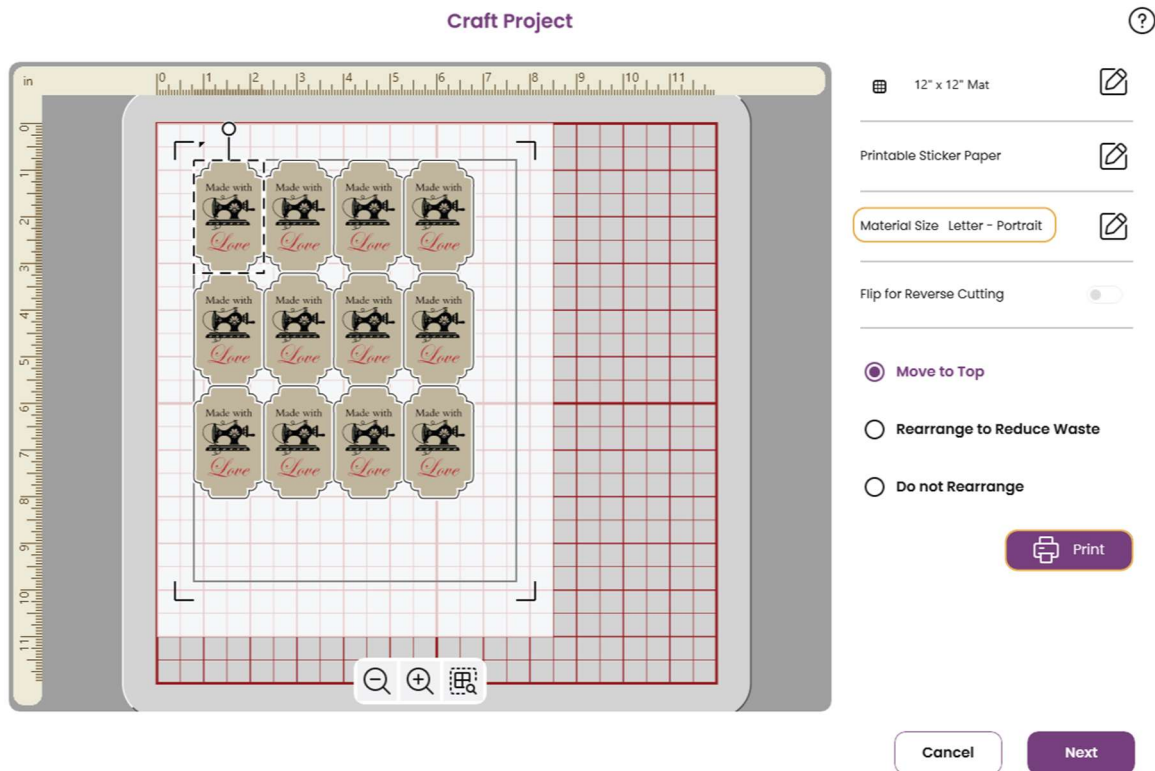

12. Select your printer and make sure you have the right size and orientation. You will find this under More Settings. Then click Print.

13. Place your printed material on the mat so that it aligns with the top left corner of the grid, and feed this into the machine. Send to Machine and it will read the registration marks on your material, then cut around the shapes.

