

**Mystical Whimsy Quilt – Class 9**







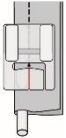
**Center Row Assembly and Putting the Rows Together**

Now you will create the pieces you need to create the center row of your quilt. Since part of the center row will be covered with the large circle, there is no need to put the decorative elements in that section that is why you see a large piece of fabric in middle section. Once the center row is complete, you can start to put all the rows together.



**Supplies:**

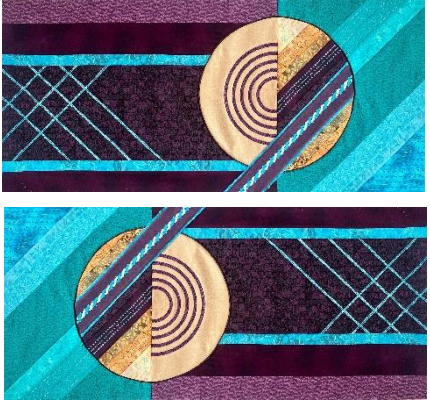Fabric #1		2(6" x 15") Large Band 2(6" x 7½") Small Band
Fabric #2		1(10½" x 20½") Middle Section that will be under the Large Circle
Fabric #2 with Candlewicking Stitches from Class 5		2(5" x 15") for Large and Small Bands
Fabric #3		2(1¾" x 15") Large Band 2(1¾" x 7½") Small Band
Fabric #4a & 4B Confetti Cloth from Class 1		2(1½" x 15") Large Band 2(1½" x 7½") Small Band

<p>Fabric #5 &amp; 6 Drunkard's Path Blocks from Class 8</p>		<p>2 Blocks</p>
<p>Fabric #7 Small Piping from Class 7</p>		<p>2 Pieces 8¼" Long</p>
<p>Top and Bottom Rows</p>		
<p>Satin Ribbon ¼" – ½" (6 – 12mm)</p>		<p>For Decorative Trim Foot</p>
<p>¼ Inch Quilting Foot for IDT™ System or Clear ¼ Inch Quilting Foot for IDT™ System</p>		<p>Part #820926096 or Part #820883096</p>
<p>Decorative Trim Foot for IDT™ System</p>		<p>Part #820614096</p>
<p>Piping Foot</p>		<p>Part #820532096</p>

Extension Table		Part number will be dependent on PFAFF® sewing machine model
PFAFF® Universal Needle Size 80/12, 5 pack		Part #821194096
PFAFF® Topstitch Needle Size 90/14, 5 pack		Part #821196096
Robison-Anton Poly Filament Bobbin Thread		Part #140000905
Robison-Anton 40wt Rayon Thread		Part number based on color
50wt Cotton Sewing Thread		
PFAFF® 4"/10.2cm Micro Tip Straight Blade Scissor		Part #821286996
SINGER® Steam Iron		Part number dependent on iron model.
Straight Pins		
Rotary Cutter, Mat, 6" x 24" Ruler		
Other Supplies <ul style="list-style-type: none"> <li>• Ironing Surface</li> <li>• Pressing Cloth</li> </ul>		





## Piping on Drunkard's Path Blocks

### Sewing Machine Preparations

1. Insert a PFAFF® Universal Needle Size 80/12 in your PFAFF® sewing machine.
2. Attach the Extension Table, this will give you a larger sewing surface and better support for your project.
3. Thread with 50wt cotton sewing thread on top and on the bobbin.
4. Attach the Piping Foot to your PFAFF® sewing machine.
5. Select a Straight Stitch.

### Sewing Instructions

1. Trim the two 8¼" narrow piping pieces seam allowance to a ¼". Tip: There are special rulers designed for trimming piping seam allowances if you have one it makes this so much easier to cut an accurate ¼" seam allowance.
2. Line up the raw edge of the piping with one of the raw edges of the Drunkard's Path block. Place the fabric and the piping under the Piping Foot with the cord in the groove on the underside of the foot. Adjust the needle position so the row of stitches is one needle position closer to the cord, to cover the stitching on the piping.
3. Repeat for the second block.

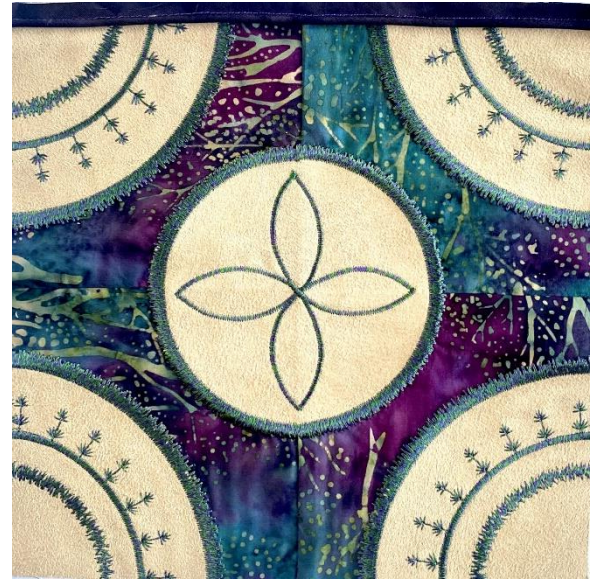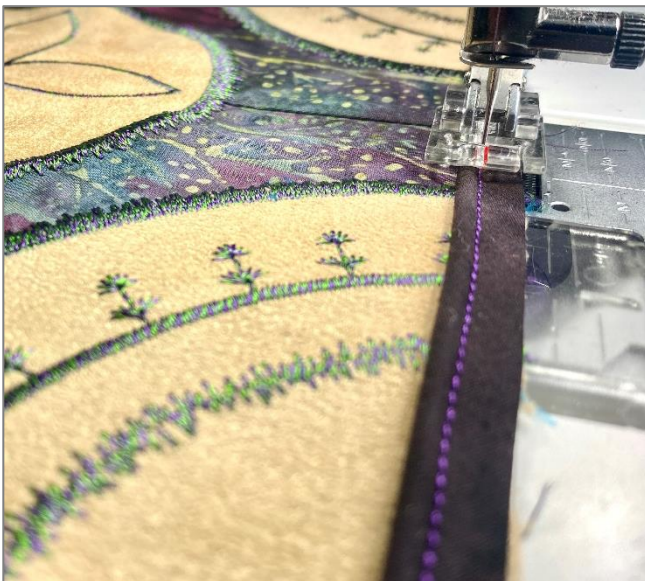

### Sewing Machine Preparations

1. Attach the ¼ Inch Quilting Foot for IDT™ System or Clear ¼ Inch Quilting Foot for IDT™ System to your PFAFF® sewing machine and engage the IDT™.
2. Select a Straight Stitch. Note: this is important because you want to make sure the needle is back in the center position.

## Sewing Instructions for Small Band

1. Sew the 1½" x 7½" pieces of Confetti Cloth to one side of the two 6" x 7½" pieces of Fabric #1 using a ¼" seam allowance as shown below. Press towards Fabric #1.



2. Sew the 1¾" x 7½" pieces of Fabric #3 to the other side of the two 6" x 7½" pieces of Fabric #1 using a ¼" seam allowance as shown below. Press towards Fabric #1.




## Sewing Machine Preparations

1. Attach the Piping Foot to your PFAFF® sewing machine.
2. Select a Straight Stitch.

## Sewing Instructions

1. Sew the pieces constructed above to the Drunkard's Path blocks on the side with the piping. Adjust the needle position to stitch beside the previous line of stitching and make sure the cord is in the groove on the underside of the Piping Foot.
2. Press.

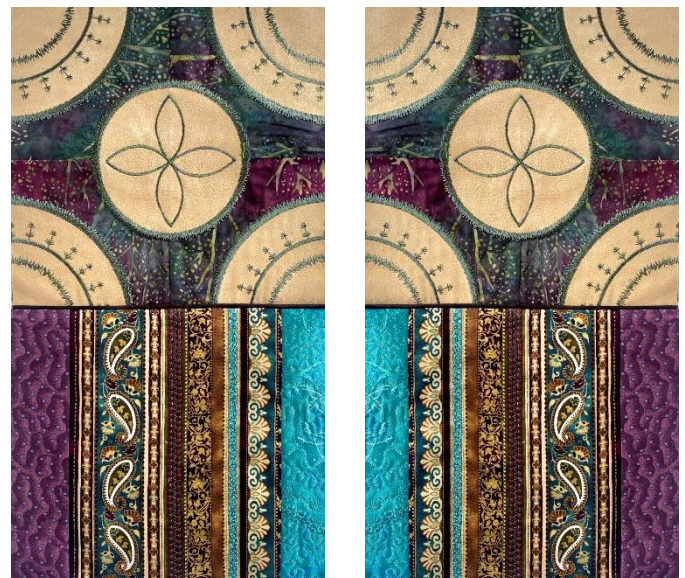



## Sewing Machine Preparations


1. Attach the ¼ Inch Quilting Foot for IDT™ System or Clear ¼ Inch Quilting Foot for IDT™ System to your PFAFF® sewing machine and engage the IDT™.
2. Select a Straight Stitch. Note: this is important because you want to make sure the needle is back in the center position.

## Sewing Instructions

1. Sew one of the 5" x 15" Candlewicking pieces between the pieces that you just constructed, as shown, using a ¼" seam allowance. Press towards the Candlewicking piece.



2. Sew the 10½" x 20½" piece of Fabric #2 to the Small Band using a ¼" seam allowance. Press towards Fabric #2.

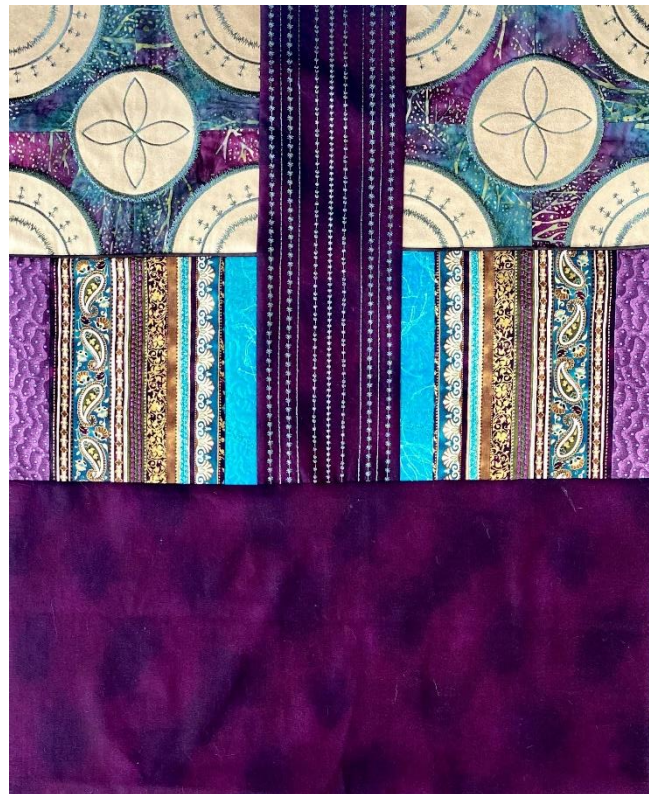



## Sewing Instructions for Large Band

1. Sew the 1½" x 15" pieces of Confetti Cloth to one side of the two 6" x 15" pieces of Fabric #1 using a ¼" seam allowance as shown below. Press towards Fabric #1.



2. Sew the 1¾" x 15" pieces of Fabric #3 to the other side of the two 6" x 15" pieces of Fabric #1 using a ¼" seam allowance as shown below. Press towards Fabric #1.





3. Sew the other 5" x 15" Candlewicking pieces between the pieces that you just constructed, as shown below, using a 1/4" seam allowance. Press towards the Candlewicking piece.




4. Sew the Large Band to the opposite side of the 10 1/2" x 20 1/2" piece of Fabric #2 to using a 1/4" seam allowance. Press towards Fabric #2. You have now constructed the center row of your quilt.






## Putting the Rows Together

1. Sew the Top Row together with the Center Row using a  $\frac{1}{4}$ " seam allowance as shown. Press towards the Center Row.

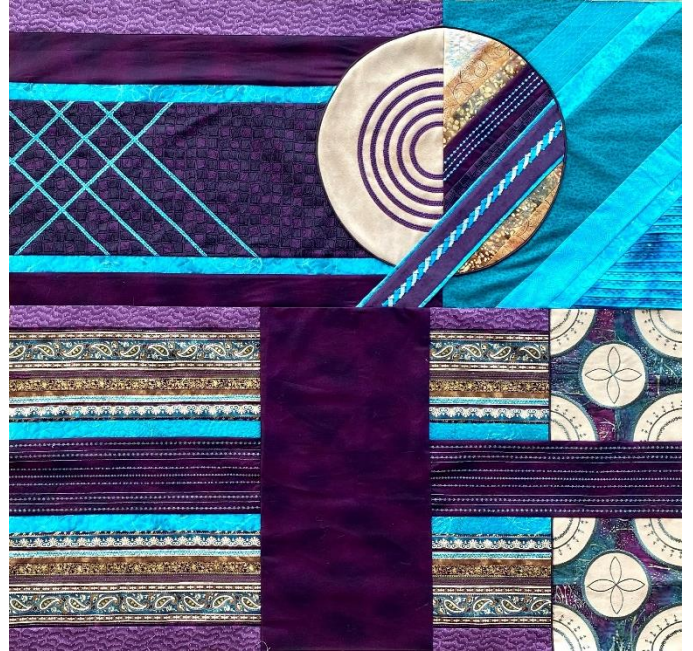

2. Sew the Bottom Row to the bottom of the Center Row using a  $\frac{1}{4}$ " seam allowance as shown. Press towards the Center Row.

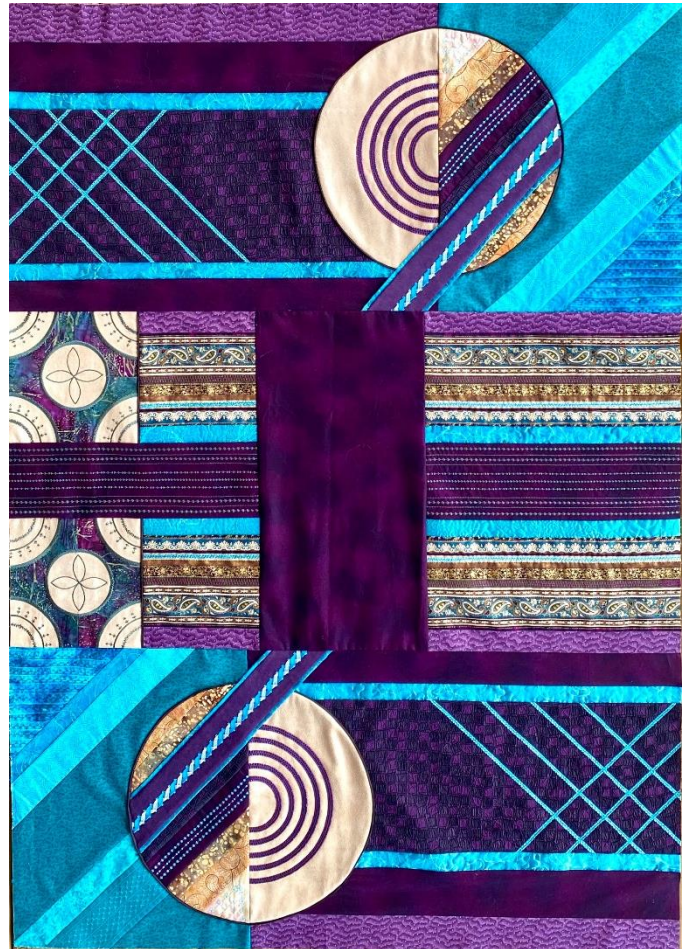




## Attaching Satin Ribbon

### Sewing Machine Preparations

1. Insert a PFAFF® Topstitch Needle Size 90/14 in your PFAFF® sewing machine.
2. Thread with Robison-Anton 40wt Rayon thread on top and Robison-Anton Poly Filament Bobbin thread on the bobbin.
3. Select a decorative stitch. Note: Decorative stitches that use forward motion work best (avoid stitches with side motion and stitches with too much motion forward and back).
4. Place the ribbon in the presser foot as shown. The size of your ribbon will determine where you position the ribbon in the foot.
5. Attach the Decorative Trim Foot for IDT™ System to your PFAFF® sewing machine and engage the IDT™ only if it is recommended for the chosen stitch.
6. Set your sewing speed to slow.

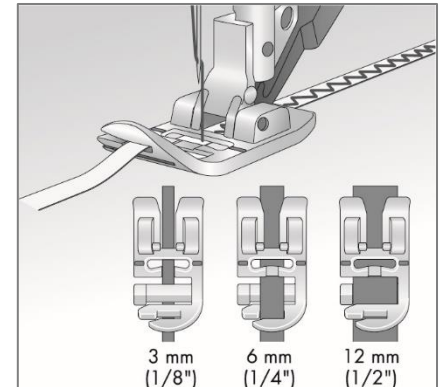

### Sewing Instructions for Satin Ribbon

1. Stitch the satin ribbon beside the seam where the rows join.

